

# limited warranty

## Utility Vehicle / Light Utility Vehicle

**Limited Warranty:** American LandMaster (hereinafter referred to as “ALM”), hereby warrants to the original purchaser, that your new ALM UTV/LUTV will be free from defects in material and workmanship for a period of one (1) year from date of purchase, except as provided below. Certain engines may carry an engine manufacturer’s warranty which is longer than one (1) year. These engines are not covered by this ALM warranty. Please refer to the engine manufacturer’s warranty policy included with your ALM product for its warranty repair requirements and procedures.

**ALM Warranty Responsibilities:** ALM, if notified of a defect in material or workmanship during the period of warranty, will repair or replace, at its option, defective parts covered by this warranty at no charge, other than the reasonable cost for the transportation of the component(s). ALM will also agree to pay reasonable charges for labor, if necessary, to perform a warranty repair.

**Warranty Claim Requirements and Procedures:** In order to be able to claim under this warranty the original purchaser must maintain and operate the vehicle in accordance with the instructions provided in the Operator’s Manual, engine manual, the supplements thereto, and labels affixed to the vehicle. Additionally, within (10) days of the discovery of an alleged defect, the original purchaser must contact ALM’s Customer Service Department at 1-800-643-7332, 7625 DiSalle Boulevard, Fort Wayne, IN 46825 or via the internet at [www.americanlandmaster.com](http://www.americanlandmaster.com). The repair or replacement of any part or parts under this Limited Warranty shall not extend the term of the warranty beyond the original term as set forth above.

**General Exclusions:** This limited warranty does not cover component failure or damage caused by any of the following: abnormal strain or stress, neglect; abuse; improper assembly of components which were supplied in the factory sealed carton after the vehicle left ALM; improper maintenance, modifications, damage caused by use of non ALM accessories, improper use of the vehicle, including, but not limited to racing, jumping, stunt driving, or any other uses prohibited by the Operator’s Manual. Additionally, this warranty does not cover vehicles which are leased, rented, or used at a concession track.

**Specific Exclusions:** This limited warranty does not apply to components which are subject to normal wear and tear. These items include, but are not limited to, the tires, battery, brakes, throttle, shift and brake cables, drive belt, the torque converter system, chain, seat, lights, fasteners, decals, or body panels and natural cosmetic discoloration of material due to ultraviolet light. Downtime, pick-up and delivery charges are not covered by this warranty. This warranty does not apply to select engines which are covered by a separate manufacturer’s warranty.

**NO IMPLIED WARRANTY OF FITNESS OR MERCHANTABILITY:** THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. SPECIFICALLY, ALM MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITATIONS SPECIFIED IN THE WARRANTY ABOVE ARE HEREBY DISCLAIMED BY ALM AND EXCLUDED FROM THIS WARRANTY. ADDITIONALLY, THIS WARRANTY EXCLUDES ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF USE. SOME STATES DO NOT ALLOW A MANUFACTURER TO EXCLUDE OR LIMIT INCIDENTAL OR CONSEQUENTIAL DAMAGES AND, THEREFORE, THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY WILL LAST. IT IS POSSIBLE THAT THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS, WHICH VARY, FROM STATE TO STATE.

**Warranty Service:** To obtain warranty service you must return your ALM product to the local authorized dealer or service center, inform them of your warranty problem and provide proof of purchase before any warranty service can be provided. The authorized dealer or service center will inspect the product to determine what repairs or parts are needed and whether they are covered under this warranty. To locate the authorized dealer or service center nearest you please call ALM customer service at 800-643-7332, or visit our website at [www.americanlandmaster.com](http://www.americanlandmaster.com) for more information.

**EPA Requirements:** This product complies with all applicable EPA Emissions and, Evaporative requirements. Included with your product’s documents are copies of ALM’s “Emission Control System Warranty Statement”. If your vehicle has a fuel tank mounted remotely from the engine, you will be provided with an “Evaporative Emissions Warranty Statement.”

## Service and Warranty Special Note

Should your American LandMaster product require warranty repair, service or if you have any questions concerning assembly, replacement parts or how to care for your product please contact your local American LandMaster dealer or American LandMaster directly.

**American LandMaster Dealers:**

To locate the authorized dealer nearest you please call American LandMaster customer service at 1-800-643-7332, visit our website at [www.americanlandmaster.com](http://www.americanlandmaster.com) or contact your place of purchase.

**Mail:**

Customer Support  
c/o American LandMaster  
7625 DiSalle Boulevard  
Ft. Wayne, IN 46825

**Telephone:**

Customer Support  
American LandMaster  
1-800-643-7332

**Fax:**

Customer Support  
American LandMaster  
1-800-399-1399

**e-mail:**

Customer Support  
American LandMaster  
[feedback@americanlandmaster.com](mailto:feedback@americanlandmaster.com)



# UTILITY VEHICLE SET-UP / PRE DELIVERY CHECKLIST

MODEL #	SERIAL #	DATE OF PURCHASE
---------	----------	------------------

## DEALER SET-UP

- |   |   |
|---|---|
| <input type="checkbox"/> <b>VISUALLY</b> - inspect for damage                 | <input type="checkbox"/> <b>MANUALS</b> - operators safety manual / engine manual |
| <input type="checkbox"/> <b>FASTENERS</b> - inspect for missing bolts, nuts   | <input type="checkbox"/> <b>WELDS</b> - inspect for missing                       |
| <input type="checkbox"/> <b>CHECK ORDER</b> - verify all items are as ordered | <input type="checkbox"/> <b>CLEAN UP</b> - check clean up of unit                 |
| <input type="checkbox"/> <b>LOOSE COMPONENTS</b> - verify all are there       | <input type="checkbox"/> <b>DECALS</b> - inspect for missing decals               |

**SET UP BY:**

**DATE:**

## PRE DELIVERY

- |   |  |
|---|--|
| <input type="checkbox"/> <b>TIRES</b> - adjust pressure to proper specification   | <input type="checkbox"/> <b>BATTERY</b> - insure that it is fully charged        |
| <input type="checkbox"/> <b>WHEELS</b> - check lug and axle nut for proper torque | <input type="checkbox"/> <b>KEYS</b> - verify operations of key switch           |
| <input type="checkbox"/> <b>CAGE</b> - check to insure cage is assembled properly | <input type="checkbox"/> <b>LIGHTS</b> - verify proper operation of all lights   |
| <input type="checkbox"/> <b>FASTENERS</b> - check all fasteners for proper torque | <input type="checkbox"/> <b>AXLE</b> - inspect attachment and wheel bearings     |
| <input type="checkbox"/> <b>TRANSAXLE</b> - insure oil level is correct           | <input type="checkbox"/> <b>ENGINE</b> - check engine RPM's for settings         |
| <input type="checkbox"/> <b>PARKING BRAKE</b> - insure that working correctly     | <input type="checkbox"/> <b>SEAT RESTRAINTS</b> - insure installed properly      |
| <input type="checkbox"/> <b>DUMP BED</b> - insure latch is adjusted properly      | <input type="checkbox"/> <b>SEATS</b> - insure seat is installed properly        |
| <input type="checkbox"/> <b>SHIFT LEVER</b> - insure working properly             | <input type="checkbox"/> <b>GUARDS</b> - inspect for missing bolts, nuts, guards |
| <input type="checkbox"/> <b>BRAKE</b> - insure brake is adjusted and working      | <input type="checkbox"/> <b>THROTTLE</b> - insure throttle is working properly   |
| <input type="checkbox"/> <b>OIL</b> - insure that engine oil level is correct     |  |

**CHECKED BY:**

**DATE:**

## DEALER INFORMATION

NAME	PHONE
ADDRESS	FAX
CITY, STATE, ZIP	EMAIL

## CUSTOMER CHECKLIST

- |   |   |
|---|---|
| <input type="checkbox"/> <b>VISUAL INSPECTION</b>             | <input type="checkbox"/> <b>MY DEALER DEMONSTRATED ALL CONTROLS</b>                   |
| <input type="checkbox"/> <b>RECEIVED SERVICE INSTRUCTIONS</b> | <input type="checkbox"/> <b>RECEIVED KEYS &amp; ENGINE MANUAL</b>                     |
| <input type="checkbox"/> <b>SHOWN ALL ENGINE CONTROLS</b>     | <input type="checkbox"/> I have reviewed and understand the warranty policy           |
| <input type="checkbox"/> <b>WARRANTY EXPLAINED FULLY</b>      | <input type="checkbox"/> I have visually inspected unit and found no defects          |
| <input type="checkbox"/> <b>RECEIVED OWNERS MANUAL</b>        | <input type="checkbox"/> I understand this vehicle product is not designed for racing |

I understand that this product is designed for off road use only and is NOT intended for use on public roads or highways unless equipped with an LSV package.\*

I understand that before operating this vehicle all operators and passengers must read, follow and understand all safe operating instructions

\* American SportWorks Low Speed Vehicle (LSV) models are street legal where allowed when properly licensed and plated. No ASW vehicles are designed for, nor allowed on highways. Check local ordinances regarding the use of Low Speed Vehicles in your area.