

## Table of Contents

<b>Section 1</b>	<b>Introduction</b> . . . . .	<b>pages 4-5</b>
	Your Vehicle's Model, VIN and Serial Number . . . . .	5
<b>Section 2</b>	<b>Safety</b> . . . . .	<b>pages 6-12</b>
	Warning Labels / Safe Operating Procedures . . . . .	7-9
	Electric / Hybrid Vehicle Specific Warnings & Cautions . . . . .	10
	Before You Drive . . . . .	11-12
<b>Section 3</b>	<b>Assembly Instructions</b> . . . . .	<b>pages 13-16</b>
<b>Section 4</b>	<b>Inspection</b> . . . . .	<b>page 17</b>
<b>Section 5</b>	<b>Operation</b> . . . . .	<b>pages 18-24</b>
	Responsible Operation and Rider Safety . . . . .	18-20
	Replacement Parts, Accessories and Service . . . . .	21
	2WD and 4WD Gas UTV Operating Instructions . . . . .	22
	Electric UTV Operating Instructions . . . . .	23
	Gas / Electric Hybrid UTV Operating Instructions . . . . .	24
<b>Section 6</b>	<b>Maintenance</b> . . . . .	<b>pages 25-33</b>
	General UTV Maintenance . . . . .	25-29
	Headlight Adjustment / Replacement . . . . .	30
	Electric / Hybrid UTV Specific Maintenance . . . . .	31-33
<b>Section 7</b>	<b>Troubleshooting</b> . . . . .	<b>pages 34-35</b>
<b>Section 8</b>	<b>Wiring Diagrams</b> . . . . .	<b>pages 36-42</b>
	Honda / Subaru / Briggs & Stratton Wiring Diagrams . . . . .	36-38
	48V Wiring Diagrams / Hybrid Wiring Diagrams / Terminal Block Wiring . . . . .	39-42
<b>Section 9</b>	<b>Warranty</b> . . . . .	<b>pages 43-45</b>
	Full Size UTV Warranty Statement . . . . .	43
	Service and Warranty Contact Information . . . . .	44
	UTV Setup and Pre-Delivery Checklist . . . . .	45
	<b>Pre Drive Inspection Checklist</b> . . . . .	<b>Back Cover</b>



7625 DiSalle Boulevard  
Fort Wayne IN 46825

62194 Commercial Street  
Roseland, LA 70456

Toll Free 800-643-7332  
Fax 800-399-1399  
www.amsportworks.com