

PRE DRIVE INSPECTION CHECKLIST

ITEM	INSPECTION PROCEDURE	ACTION
Engine Oil Level	Add oil if required. Check for leaks. Tighten filler cap securely.	Refer to operator's or engine manual.
Fuel Level	Add fuel if necessary. DO NOT overfill. DO NOT mix oil with gas. Replace cap tightly.	Refer to operator's or engine manual. DO NOT refuel a hot engine. Allow engine to cool before adding fuel.
Warning Decals	Make sure all warning decals are legible and securely attached.	Replace as necessary.
Tires	Tread must have a minimum height of 1/8" at center of tire. Prior to operating vehicle, check and adjust tire pressure as indicated on the sidewall of each tire, or in the vehicle manual (we recommend 12 p.s.i. for full size UTVs). A tire pressure gauge is required to obtain accurate readings.	Replace tires if tread height is less than 1/8" at center of tire. Add or remove air as necessary to meet requirements indicated on sidewall of each tire or in the specifications section of the vehicle manual (12 p.s.i. recommended for full size UTVs).
Drive Train	Check condition and fluid levels	Lubricate, adjust as necessary.
Throttle	Check for smooth operation. Ensure throttle 'snaps' back to idle. Check for frayed or loose cable. Check for mud, debris, and ice in throttle mechanism Check idle adjustment	Replace damaged cable. Clean out any mud and debris. If ice is present, move vehicle to a warm place and allow the ice to melt and water to dry. Adjust as necessary
Fasteners	Check wheels to see that all wheel nuts are tightened securely at 65 ft. Lbs. Check for missing fasteners. Check that all other fasteners are secure.	Tighten fasteners as necessary. Replace fasteners as necessary.
Brush Bars	Make sure all brush bars are in place and securely attached.	Replace damaged bars or fasteners and tighten as necessary.
Steering	Make sure steering turns freely. Check for proper 'toe-in' of wheels.	Lubricate and adjust as necessary.
Frame / Chassis	Check for bent or otherwise damaged frame and/or other chassis components.	Replace as necessary.
Guards	Check all guards covering moving parts.	Tighten fasteners on loose guards. Replace worn or damaged guards.
Lights	Check for proper operation	See OPERATION section of the Operator's Safety Manual
Suspension and Ball Joints	Check for ball looseness	Replace as necessary
Keyswitch	Perform switch test and ensure that engine shuts off when key is turned to the "OFF" position.	Repair / replace as necessary
Brakes	Ensure brakes function properly.	Adjust / replace as necessary
Shields	Check all shields	Tighten fasteners on loose shields. Replace damaged shields.