

HYBRID UNIT BATTERY LOCATION

! WARNING The electrolyte is a solution of acid and water so skin contact should be avoided.

! WARNING **REMEMBER:** Always wear a safety shield or approved safety goggles when adding water or charging batteries.

! WARNING **NEVER** jump the battery with an automotive battery



THERE ARE 5 BATTERIES ON THE HYBRID UNITS (LM650H / LMC4H / LM650P / LMC4P)

1 12V - utility class battery for starting power.

4 12V Trojan AGM sealed batteries for the 48V side – two are located under the seat and two under the hood. One on each side in the wheel well area.

The easiest way to access the batteries under the hood is by removing the bolts at the overhead bars for the hood rack and hood and then remove the pushpins around the dash where the hood attaches. Once the push pins are removed, the rack and hood can be lifted forward for access under the hood.