Operator's Manual SUPPLEMENT

MODEL NO. 225

WARNING:
Read Engine
Owner's Manual,
Vehicle Operator's
Manual, and
Supplement
Carefully Before
Operating
Vehicle.

Parts List Assembly




THIS VEHICLE IS FOR OFF-ROAD USE ONLY



BEFORE OPERATING THIS VEHICLE, THE OWNER AND/OR OPERATOR MUST UNDERSTAND THE VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON PUBLIC ROADS, STREETS, HIGH-WAYS, OR THOROUGHFARES AND HAVE READ AND HAVE AN UNDERSTANDING OF ALL THE INSTRUCTIONS FOR SAFE ASSEMBLY AND OPERATION AS WELL AS THE INSTRUCTIONS GOVERNING THE ENGINE AND OTHER PORTIONS OF THE VEHICLE.

10/94 PART NO. 4350S56

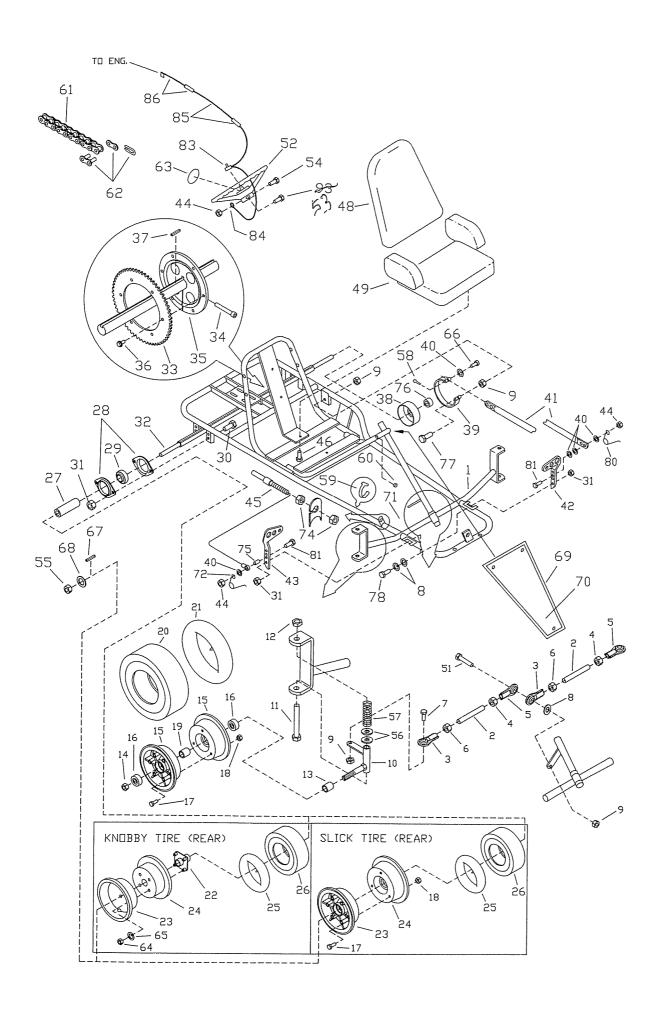

REPAIR PARTS MODEL 225

	parts. A. parts. 11-part	2.			
REF	PART 1993 NO1 1993 3092-2	· <i>Y</i>	REF	PART	
<u>NO.</u>	NO. 30 "	<u>DESCRIPTION</u>	<u>NO.</u>	<u>NO.</u>	DESCRIPTION
1			45	1390	Throttle Cable
ASM	1464	Tie Rod Assembly (inc. #2-6)	46	9006	Bolt, 1/4-20 x 1/2" Flange
2	1465	Tie Rod	48	5159	Seat Back
3	1415	Rod End - Left Hand Thread	49	5160	Seat Bottom
4	9092	Nut, 3/8-24 Right Hand Thread	50		Not Used
5	1414	Rod End - Right Hand Thread	51	9145	Bolt, 3/8-16 x 1-3/4"
6	9024	Nut, 3/8-24 Left Hand Thread	52	6038	Steering Wheel
7	9146	Bolt, 3/8-16 x 1-1/2"	53	9080	Bolt, 1/4-20 x 2-3/4"
8	9091	Washer, 3/8 Flat	54	9160	Bolt, 1/4-20 x 7/8" with Nylock
9	9085	Nut, 3/8-16 Lock	55	9052	Nut, 3/4-16 Toplock
10	9307-2	Spindle - Right Side	56	9022	Washer, 1/2" Flat
NI	9308-2	Spindle - Left Side	57 58	5681	Spring
11	5682	Bolt, 1/2-13 x 5-1/2"	58 50	9116	Cotter Pin
12	1012	Nut, 1/2-13 Toplock	59 60	1019	Ty-Wrap
13 14	1104 1046	Spacer, 5/8" x 3/4" Nut, 5/8-11 Toplock	61	1463	Bushing, Plastic
ASM	4553 (SL)		01	6021 (SL) 6021D (KN)	Chain, #35 x 79P w/ Mstr Link
ASIVI		Front Wheel Asmbly (inc. #15-21)	62	1269	Chain, #35 x 87P w/ Mstr Link
15	2497 (KN) 5158	Front Wheel Asmbly (inc.#15-21) Wheel Half - 4"	63	SM	Master Link, #35
16	1093	Bearing	64	2388	Decal, Steering Wheel Nut, 3/8-24
17	5839	Bolt, 1/4-20 x 3/4"	65	1130	Washer, 3/8 Split Lock
18	1186	Nut, 1/4-20 Whiz	66	9118	Clevis Pin, 1/4"OD x 1-1/4"
19	5949	Spanner	67	6123	Key, 1/4" Square x 1-3/4"
20	1751 (SL)	Tire, 4.10 x 3.50 x 4" Slick	68	1194 (KN)	Washer, 3/4" Flat
	2244 (KN)	Tire, 4.10 x 3.50 x 4" Knobby	ASM	SM	Custom Cover Asmbly (inc. #69-70)
21	1053	Tube, 4"	69	2257	Custom Cover Ashibly (Inc. #09-70)
ASM	6099 (SL)	Rear Wheel Asmbly (inc. #23-26)	70	SM	Decal, Custom Cover
	6279P (KN)	Rear Wheel Asmbly (inc. #22-26)	71	6104	Decal, Floor Pan
22	4927 (KN)	Hub	72	9502	Spring, Left Wound
23	5128 (SL)	Wheel Half, 5" Outside	74	9058	Nut, 5/16-24 Jam
	4925 (KN)	Wheel Half, 6" Outside	75	1389	Bushing
24	5127 (SL)	Wheel Half, 5" Inside	76	1082	Spacer, 1"ID x 7/16"
	4926 (KN)	Wheel Half, 6" Inside	77	1449	Bolt, 3/8-16 x 2"
25	1753 (SL)	Tube, 5"	78	1447	Bolt, 5/16-18 x 1-3/4" Shoulder
	3802 (KN)	Tube, 6"	80	9503	Spring, Right Wound
26	6035 (SL)	Tire, 4.10 x 3.50 x 5" Slick	81	1847	Bolt, 1/4-20 x 1"
07	4915 (KN)	Tire, 145/70 x 6" Knobby	ASM	1391	Stop Switch Asm (inc. #83-85)
27	2069 (SL)	Spacer, 1" ID x 2-7/8"	83	1392	Stop Switch
28	5646 (KN)	Spacer, 1" ID x 2-1/4"	84	1393	Ring Terminal
29	1760 3941	Bearing Flange	85	1394	Wire, 50" with Splice Connector
30	2264	Bearing	86	1406	Wire, to Engine with Splice Cnnctor
31	1189	Bolt, 5/16-18 x 3/4"	NI	1049	Warning DecalDrive Cover
32	2253	Nut, 5/16-18 Toplock	NI	2832-White	Warning Decal - No Passengers
ASM	5152 (SL)	Axle	NI	4504	Warning Decal - Yellow
	2999 (KN)	Sprocket Asmbly (inc. #33-36)	Ni	4912	Warning Decal - This Guard
33	1420 (SL)	Sprocket Asmbly (inc. #33-36) Sprocket, 60 Teeth 35 Chain	NI	6621 (SL)	Decal - Tire Pressure
	2998 (KN)	Sprocket, 72 Teeth 35 Chain		6625 (KN)	Decal - Tire Pressure
34	6701	Bolt, 5/16-18 Socket Head	NI	6791	Decal - Oil Clutch
35	6280	Sprocket Hub	NI	2601	Engine Owner's Manual
36	1876	Bolt, 1/4-20 x 5/8" Whiz	NI	4350	Fun Kart Operator's Manual
37	1775	Key, 1/4" Square x 1-1/4" Long			
38 39	1078	Brake Drum	ASM = Assembly		
40	1492	Brake Band	NI = Not Illustrated		
41	1854 8040	Washer, #14 Flat	SM = Specify Model		
42	8040 1436	Brake Rod		· •	
43	1437	Brake Pedal	NOTE	: Use F	Part Numbers with the (SL)
44	9057	Throttle Pedal	A .		kart has Slick Tiros or (KNI) if



Nut, 1/4-20 Toplock

9057

NOTE: Use Part Numbers with the (SL) designation if your kart has Slick Tires or (KN) if your kart has Knobby Tires.

GENERAL

- 1. Carefully unpack all parts from shipping containers.
- 2. Locate and unpack the Fun Kart Operator's Manual.
- 3. Complete the information block on the back page of the Operator's Manual.
- 4. Identify and verify all parts in the Parts Pack.
- 5. Reference the Exploded View for correct assembly of all parts.

SEAT ASSEMBLY

- 1. Attach the Seat Bottom (REF 49) to the Kart Frame using two Bolts (REF 46). Tighten until snug.
- 2. Attach the Seat Back (REF 48) to the Kart Frame using two Bolts (REF 46). Tighten until snug.

CUSTOM COVER ASSEMBLY

1. Attach the Custom Cover (REF 69) to the Kart Frame using three Ty-Wraps (REF 59). One Ty-Wrap should be used to secure the lower Custom Cover hole to the tab welded to the front bumper. The remaining Ty-Wraps are to secure each top Custom Cover hole to the steering column support.

PRE-RIDE MAINTENANCE


1. Carefully and completely read the Engine Owner's Manual. Fill the Engine Crankcase with oil as described in the Engine Owner's Manual.



CAUTION: The Engine is shipped without oil in the crankcase.

- 2. Carefully and completely read the Fun Kart Operator's Manual. Follow the Pre-Ride Inspection steps. Fill the Fuel Tank with Fuel and Lubricate appropriate points as described in the Fun Kart Operator's Manual.
- 3. If there are any problems or discrepancies, contact your Dealer.


ENGINE ASSEMBLY REPAIR PARTS MODEL 225

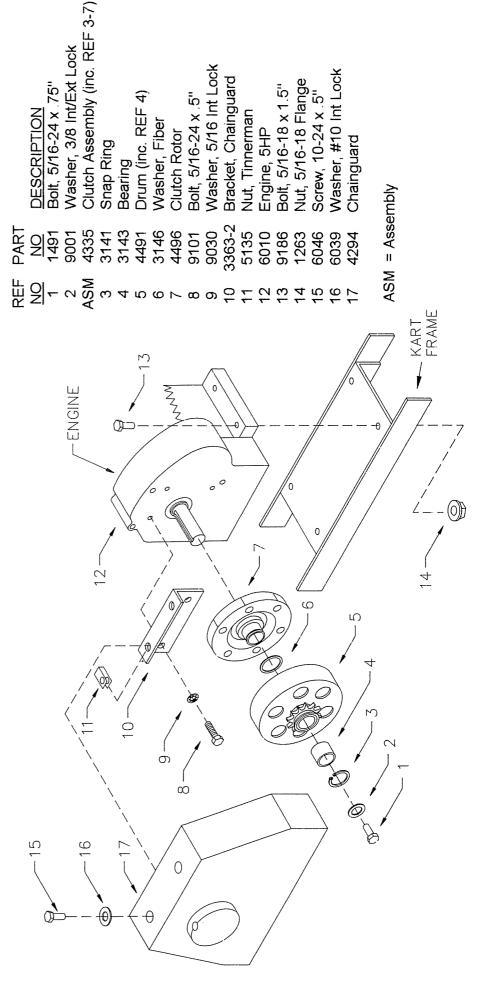

THROTTLE CABLE INSTALLATION

ASSEMBLY: Pass the throttle cable through the cable retainer and butt the throttle cable housing end against the inside shoulder of the cable retainer. (The cable retainer is to be securely fastened to the engine with the clamping screw.) Pass the end of the Throttle Cable through the hole in the cable stop. Before tightening cable stop screw:

- 1. Ensure spring anchor, spring, and cable are installed as illustrated above.
- 2. Ensure throttle pedal is in rearward (idle) position.
- 3. Ensure that there is no slack in the throttle cable with *no* tension applied to return spring.
- 4. Ensure cable housing is inside and against the cable retainer.

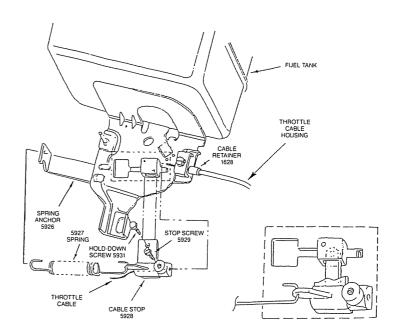

REAR WHEEL INSTALLATION

(See Page 2 For Exploded View Drawing)

IMPORTANT: The "Wheel Installation" section of the **Operator's Manual** applies only to the front wheels of this vehicle. The rear wheels are installed on the drive axle. When installing the rear wheels, be sure the wheel spacer (REF 27) is in place and the key (REF 67) is in the keyway of the axle. This key also fits into the keyway of the inside wheel half. (REF 24). Failure to install the key will result in severe damage to the rear wheel. Be sure the axle lock nut (REF 55, see Maintenance-Locknuts section in the **Operator's Manual**) is tightened securely against the wheel. There should be no side play of the wheel. If rear wheels are removed for any reason, the left side should be tightened completely first. This will help insure proper alignment of the drive system.