

LARGE SKID PLATE - 2-55011

**SPECIAL REQUIREMENTS: NOT FOR USE ON 2WD UNITS
 ONLY FOR USE ON 4WD V-TWIN ENGINE UNITS.**

TOOLS REQUIRED

1/2" wrench and or 1/2" deep well socket and ratchet

ESTIMATED INSTALLATION TIME


15 minutes


RECOMMENDED SKILL LEVEL

Beginner

Before you begin, check the contents of the kit against the parts list below. Immediately contact American LandMaster with any questions or discrepancies. American LandMaster cannot assume responsibility for any damage or injury resulting from incorrectly installed parts. American LandMaster suggests that accessory kits be installed by an authorized American LandMaster dealer or service center.

PARTS LIST FOR AMERICAN LANDMASTER INSTALLATION (parts not shown actual size)

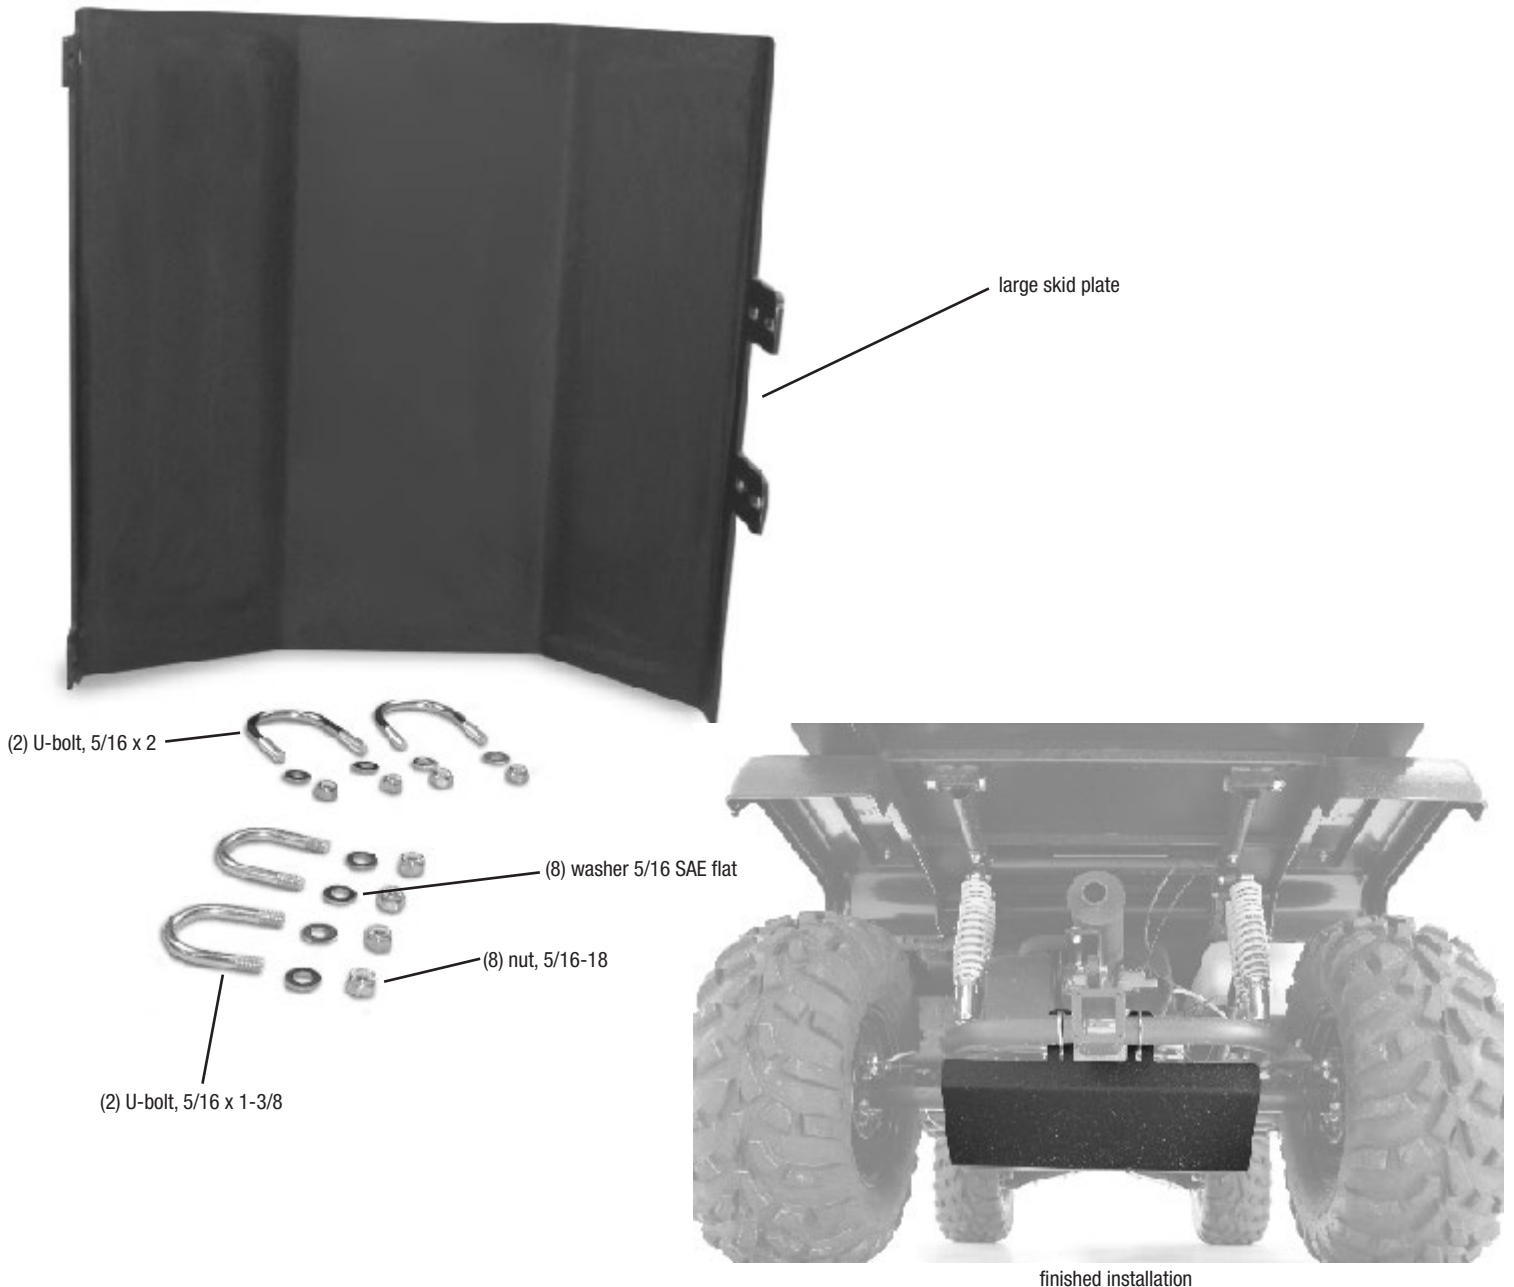

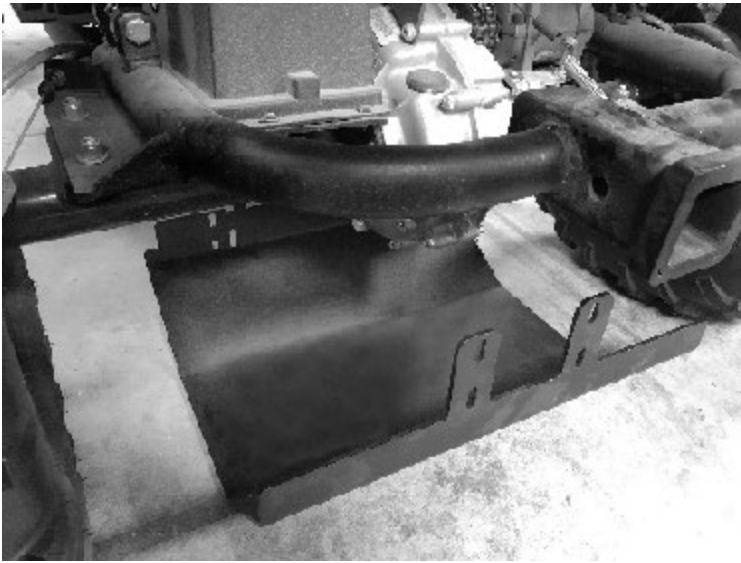

STEP 1 LOCATE SKID PLATE

Locate skid plate under the rear of the unit as shown.

STEP 2 INSTALL REAR U-BOLTS

Using the supplied 2" u bolts, washers, and nuts secure U-bolts.



STEP 3 INSTALL FRONT U-BOLTS

Lift the front of the skid plate into position and use the 1 3/8 U-bolts, washers, and nuts to secure the front of the skid plate. Make sure all hardware is secure.