

HORN KIT (2-55032)

As illustrated below, this kit consists of:

Horn	Qty: 1
Wiring Harness	Qty: 1
Button Switch (2 screws, nut & button)	Qty: 1
Zip Ties	Qty: 4

TOOLS REQUIRED	
	Drill
	Phillips Screwdriver
	3/8" Wrench or socket
	1/2" Wrench

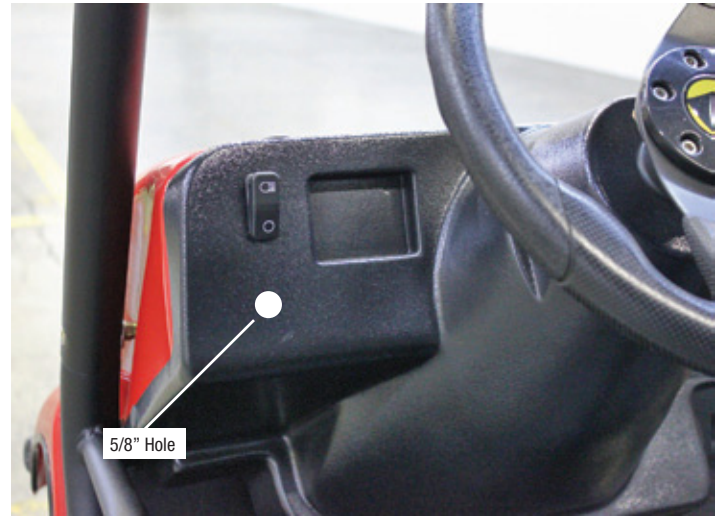


Fig. 2

Procedure:

- 1 Mount the horn behind the dash using the lower left steering column bolt as shown in figure 1.
- 2 Drill a 5/8" hole in the plastic dash in the desired position for the horn button making sure that wiring will reach the horn and terminal block. (see figure 2 for recommended placement)
- 3 Attach the ring terminals on the wiring harness to the button switch with the provided screws (figure 3) and install the button switch in the 5/8" hole.
- 4 Attach the spade terminals that are nearest the switch to the horn. Remove the terminal block cover that is under the hood using a 3/8" wrench. Connect the provided wires as shown in figure 4.
Red - Second from left Black - Second from right
- 5 Replace the terminal block cover and fasten the wires away from the steering shaft and shifter controls with the provided zip ties.



Fig. 3

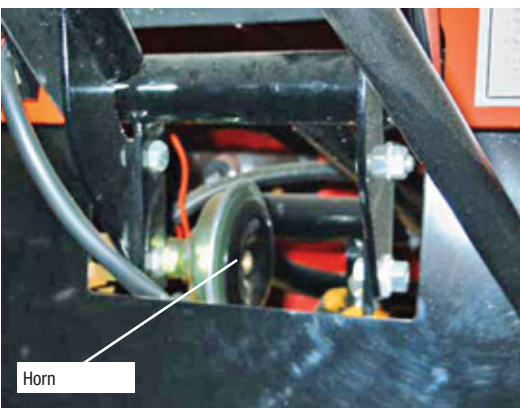


Fig. 1

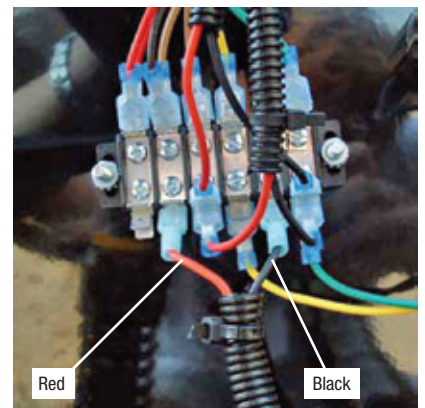


Fig. 4